



How to upgrade firmware in Wi-Fi modules on CAT ROT/I/XT units.

1. Download the firmware to a location on your PC.
2. Turn on the CAT ROT/XT AIS and CAT I/XT GPS and connect to the Wi-Fi network they create.
3. Start Google Chrome or Internet explorer and type the IP address of the CAT I/XT GPS unit, 192.168.3.99  
User: SafePilot  
Password: 86912255


*When you enter the WEB site of the module you should not change any other settings. Anyway these settings that you see are not actual settings of the module, they are handled by the micro-controller inside the unit.*

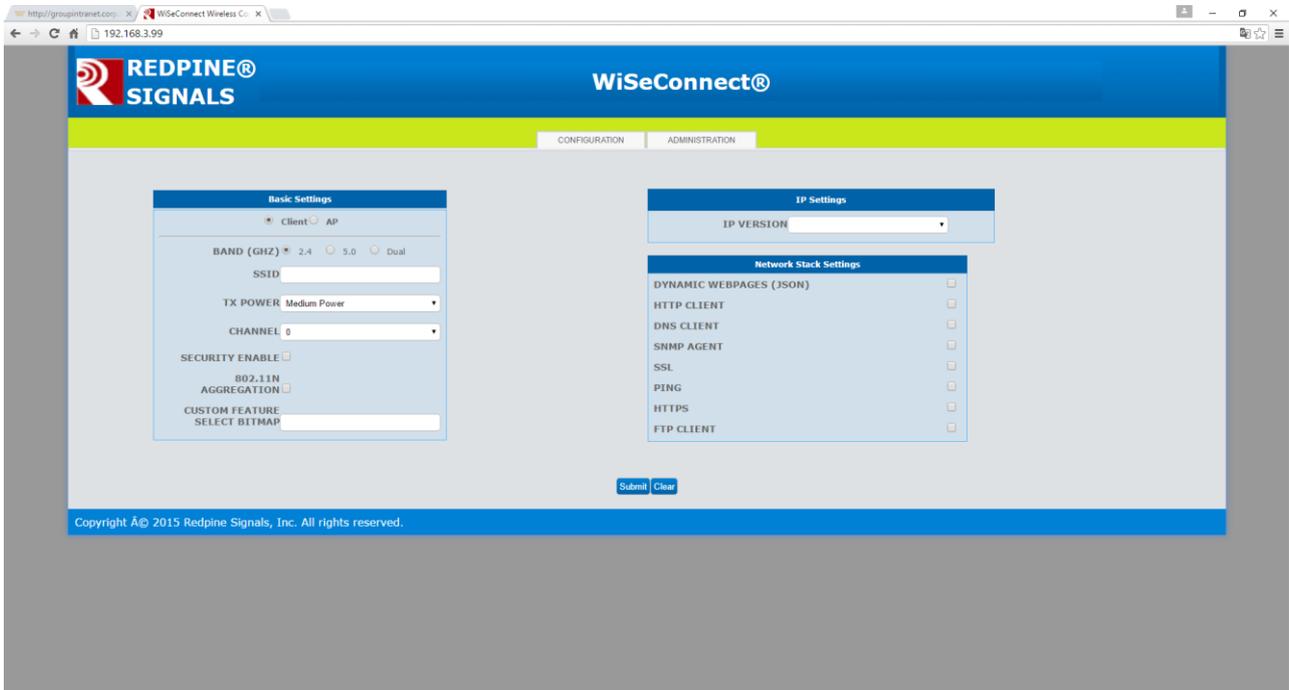


4. Select the Administration page and press "Choose File"

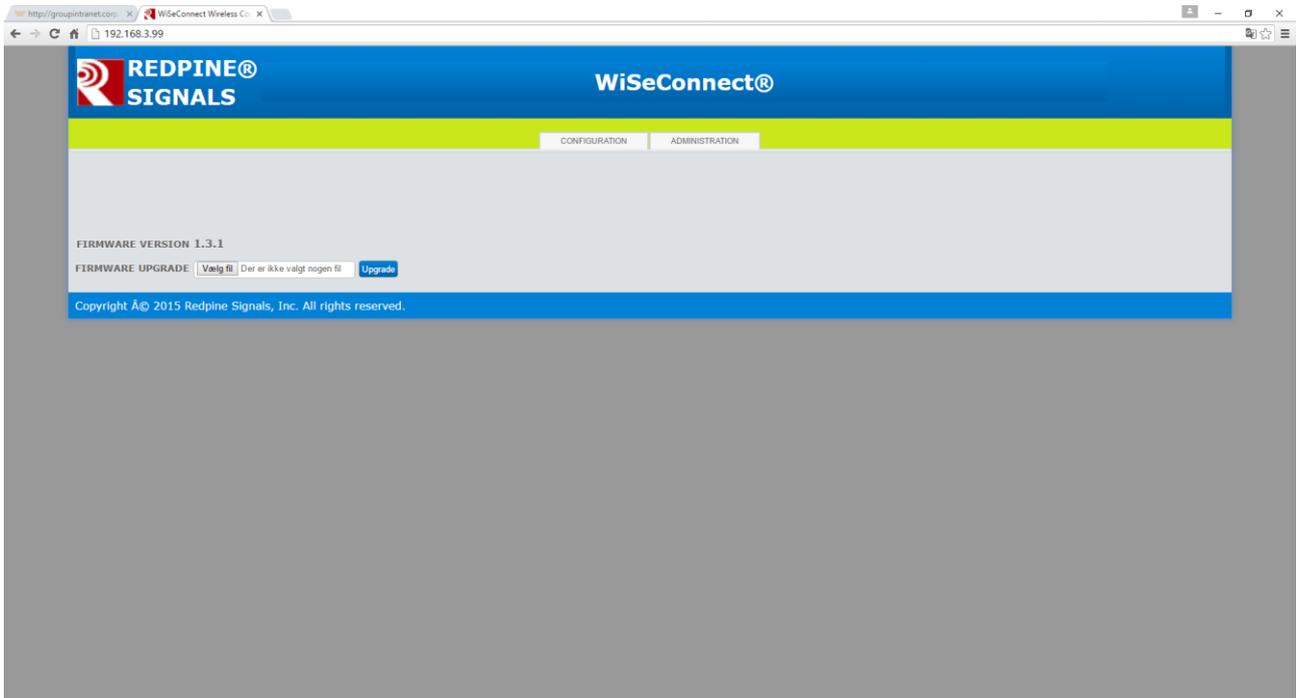


5. Browse to the firmware you recently downloaded and select it.

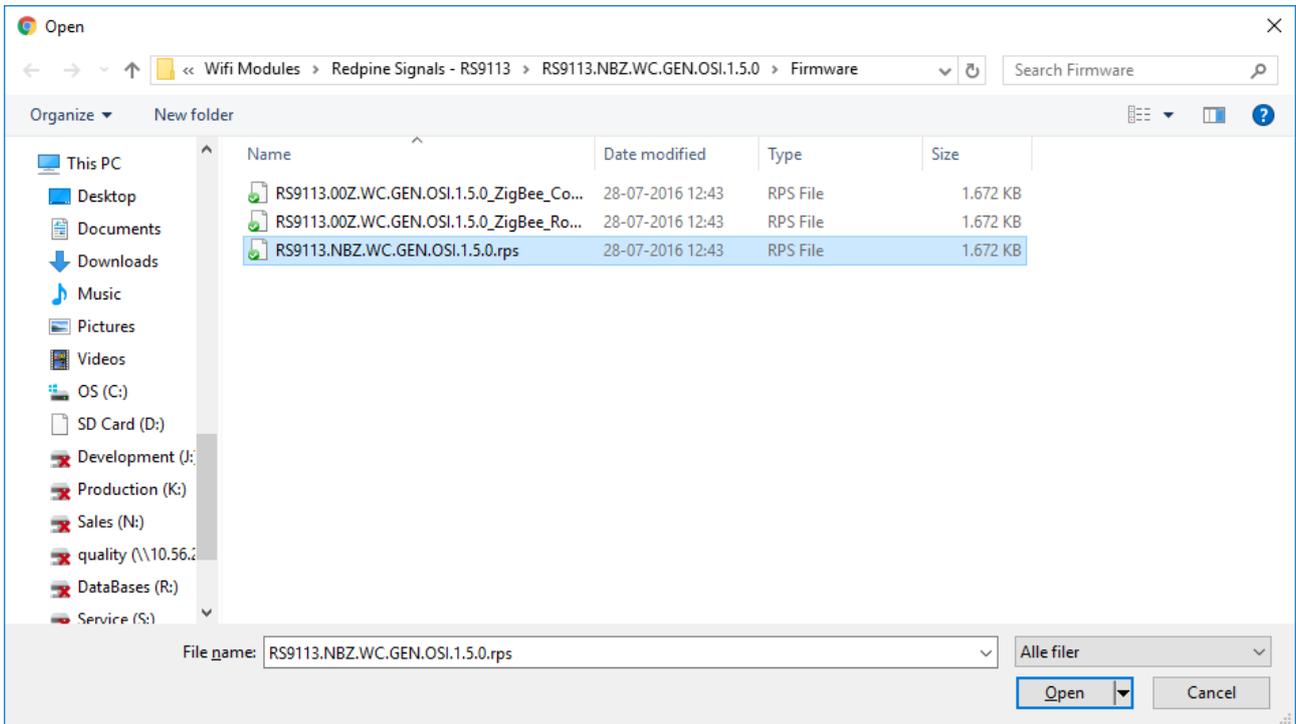

6. Press “Upgrade”

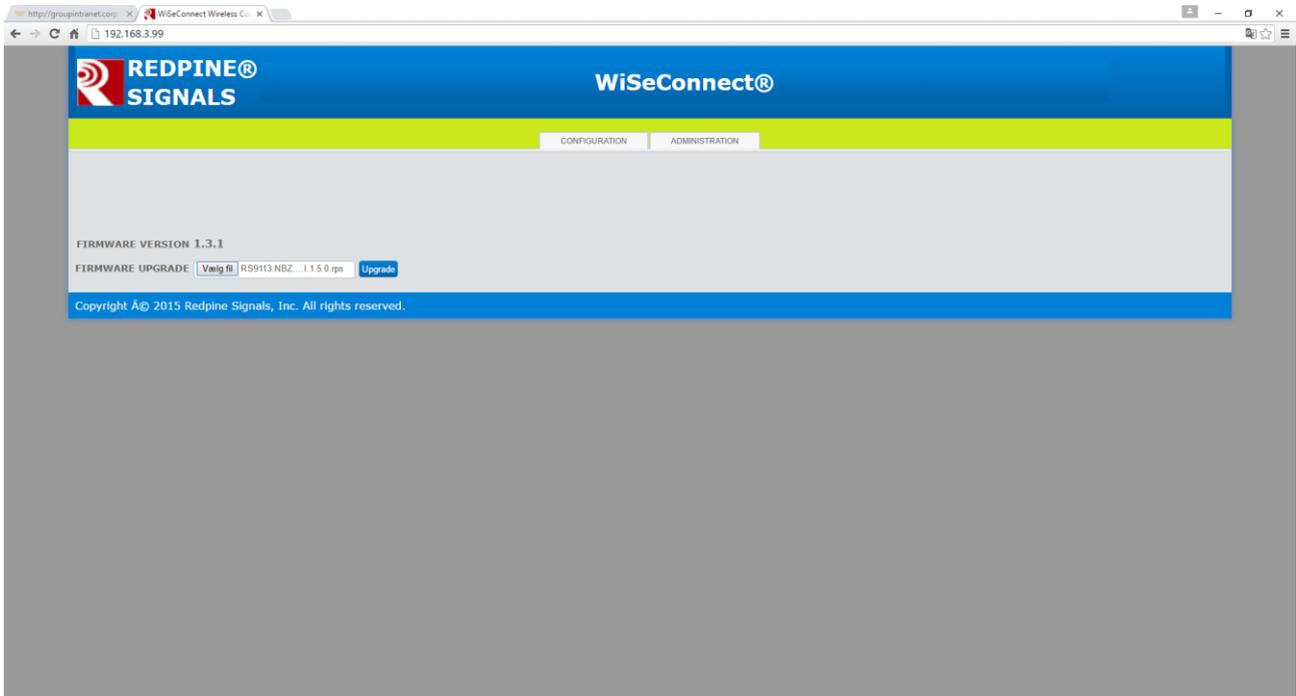

7. Once you have pressed “Upgrade” the XT will start flashing green.
8. When you are prompted “Firmware Upgraded Successfully” it will take additionally 2 minutes for the firmware to be loaded inside the module. The green flashing stop when the firmware is finally upgraded in the unit.

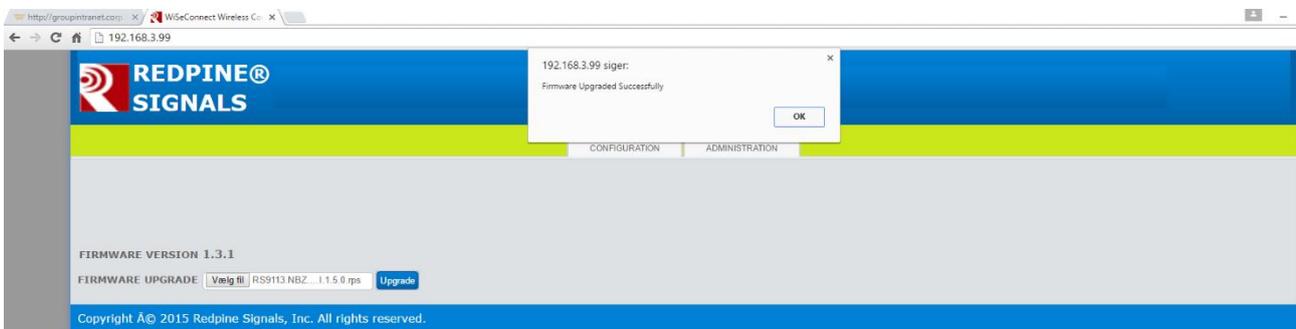


9. Now type the IP address of the XT AIS, 192.168.3.100

User: SafePilot

Password: 86912255

10. Go to Administration page and browse to the firmware, select it and press Upgrade as previously done.

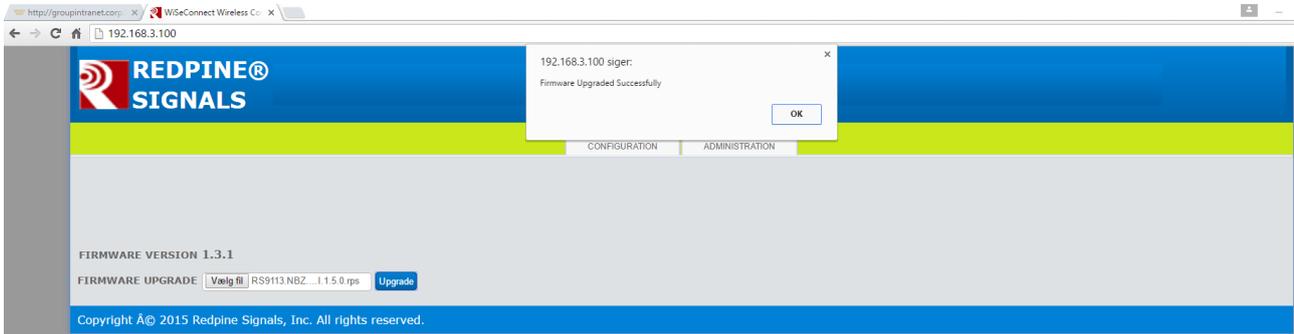

11. When you are prompted "Firmware Upgraded Successfully" and the green flashing stop you have upgraded the firmware. The green light will flash for something like 3 minutes and when it stops you need to restart the unit to make it operational again.